


UEF BAY SPACER FOOTPRINT CONFIGURATION NUMBERS & CODES

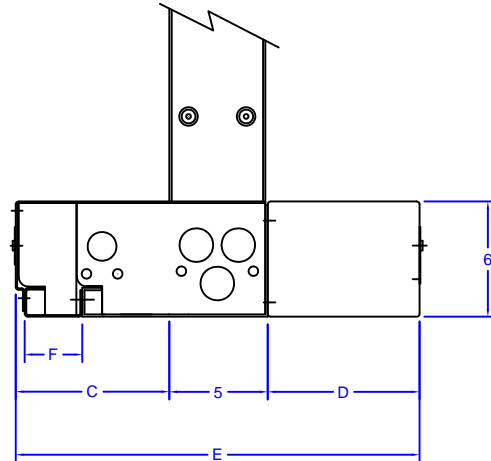

SPACER PART # → R a bb hhh ww c-x

a = 3 FOR SEISMIC
 a = 4 FOR ZONE 0-2
 bb = SP FOR BAY SPACER
 bb = ES FOR END GD SPACER
 SPACER HEIGHT(INCHES)
 SPACE WIDTH
 2, 5 OR 10
 FINISH:
 1 = MTP GRAY
 3 = NETWORK BLUE
 4 = OFF WHITE
 FOOT PRINT CODE *
 SEE TABLE BELOW

E	DIMENSIONS			CONFIG CODE 'c'	
	C	F	D	LARGE	SMALL
10	5	0	0	A	M
11	6	0	0	P	Q
12	5	2	2	R	D
15	5	5	5	B	V
16	5	5	6	G	H
16	6	5	5	E	F
18	5	8	8	J	K
20	5	10	10	L	Z
21	8	8	8	W	X

